

SECTION 6 PARTS DATA

CABINET GROUP All Models


Key	Part Number	Description	
*	9960-256-021	Door Assy., Loading Complete (White)	1
*	9960-256-022	Door Assy., Loading Complete (Almond)	1
*	9960-256-025	Door Assy., Loading Complete (S.S.)	1
		(includes the following parts)	
1	9960-255-007	Door Assy., Loading-Ring Only	1
2	9982-280-002	Plate Assy., Hinge (White)	1
2	9982-280-005	Plate Assy., Hinge (Almond)	1
2	9982-280-011	Plate Assy., Hinge (S.S.)	1
*	9545-012-015	Bolt, Hinge Plate to Door	4
*	8640-413-002	Nut, Hinge Plate to Door	4
3	9212-002-003	Glass, Door	1
4	9206-164-006	Gasket, Glass	1
*	9548-117-000	Support, Door Glass	1
5	9206-394-001	Gasket, Outer Rim	1
6	9244-082-001	Handle, Loading Door	1
*	9545-018-017	Screw, Handle Mtg	2
*	9531-033-001	Stud, Door Catch	1
7	8640-413-003	Nut, Door Catch (acorn)	1
7	8640-413-001	Nut, Door Catch (hex)	1
8	9545-052-001	Screw, Door to Hinge Strap	1
*	8641-436-003	Washer, Fiber/plastic	1
*	6068-041-001	Conduit, Door Switch Wire	1
9	9545-012-003	Screw, Front Panel (conduit mtg)	1
*	8641-582-019	Lock washer, Front Panel (for screw above)	1
*	8640-413-004	Nut, Elastic Stop (for screw above)	1
10	9545-008-020	Screw, Front Panel	4
*	8641-582-019	Lock washer, Front Panel (for screw above)	4
*	8640-399-001	Nut, Spring (front panel to cabinet)	6
11	8641-436-004	Washer, Fiber (between cabinet & front panel on top 2 screws only)	2
12	9960-246-022	Door, Lower Service (White)	1
12	9960-246-025	Door, Lower Service (Almond)	1
12	9960-246-026	Door, Lower Service (S.S.)	1
13	9578-081-002	Trim, Lower Service Door (top)	1
14	9545-008-021	Screw, Lower Service Door Trim (top)	4
15	9578-084-001	Trim, Lower Service Door (kick)	1
16	9435-004-001	Overlay, Trim (kick)	1
17	9545-008-010	Screw, Lower Service Door Trim (kick)	3
*	9206-176-000	Gasket, Cork Pad	2
*	6292-006-006	Key, Lower Service Door	1
18	8650-006-003	Lock, Lower Service Door	1
19	9108-084-010	Door, Upper Service (White)	1
19	9108-084-013	Door, Upper Service (Almond)	1
19	9108-084-014	Door, Upper Service (S.S.)	1
*	9548-268-001	Support, Upper Service Door	1
*	9206-176-000	Gasket, Cork Pad	3
*	6292-006-006	Key, Upper Service Door	1
20	8650-006-003	Lock, Upper Service Door	1
*	8638-211-001	Rivet, Drive (upper door mtg.)	2
*	8641-581-005	Washer, Flat (for rivet above)	2
*	8544-005-000	Leg, Leveling	4
*	9074-261-001	Cover, Cabinet	1

CABINET GROUP

All Models

(continued)


Key	Part Number	Description	
21	9544-047-002	Strap, Hinge (White)	1
21	9544-047-005	Strap, Hinge (Almond)	1
21	9544-047-007	Strap, Hinge (Gray)	1
22	9531-033-001	Stud, Door Catch	1
23	9086-015-002	Catch, Loading Door	2
*	8638-190-008	Rivet, Catch Mtg.	4
24	9545-008-020	Screw, Strap to Panel	4
25	9545-008-006	Screw, Front Panel (bottom flange)	3

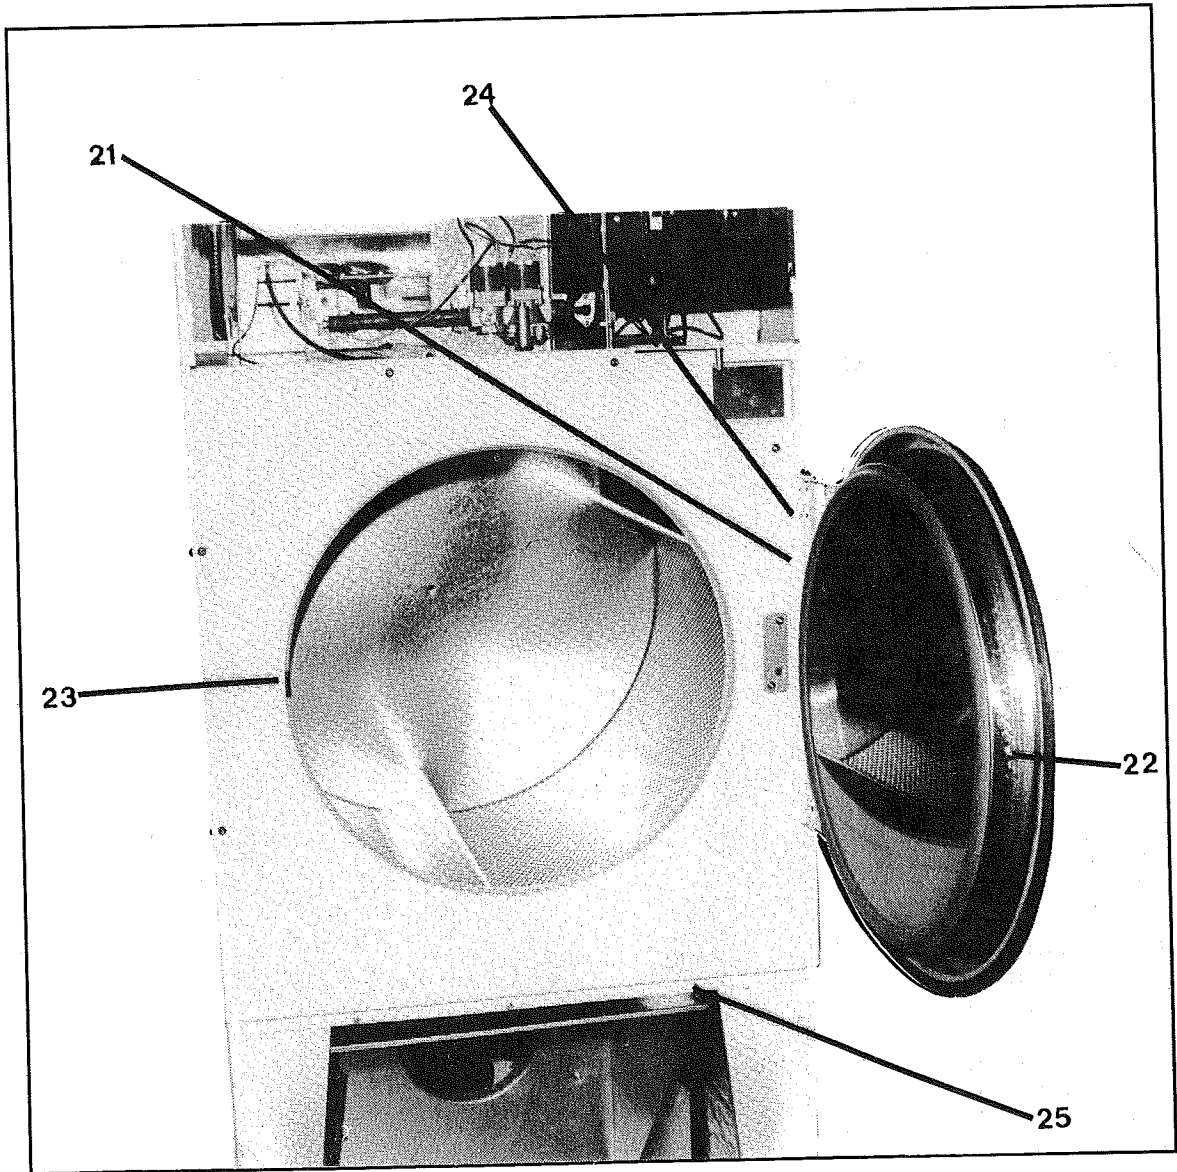

CABINET GROUP

Rotary Meter & Manual Timer


Key	Part Number	Description	
1	9578-085-002	Trim, Upper Door	1
2	9412-083-001	Nameplate, Commercial Dryer	1
3	9454-569-013	Panel, Front (White)	1
3	9454-569-014	Panel, Front (Almond)	1
3	9454-569-017	Panel, Front (S.S.)	1

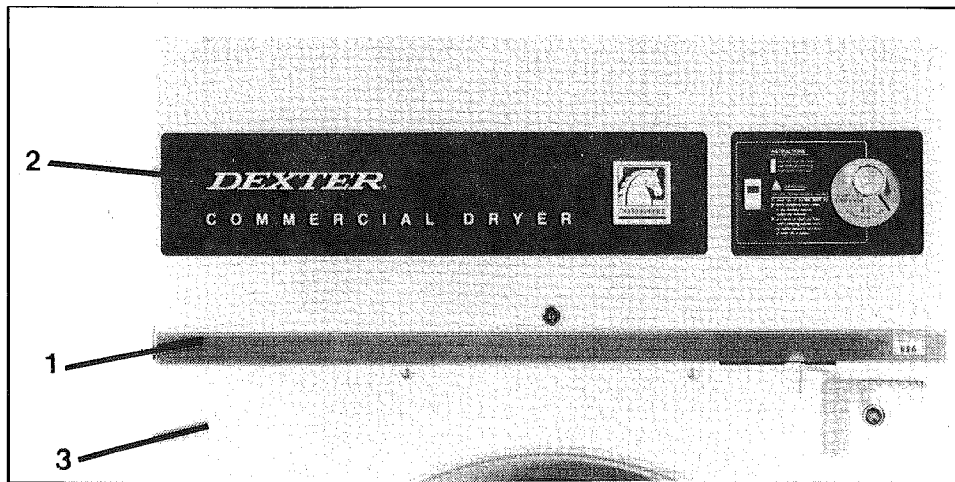

CABINET GROUP

Manual Timer Only


Key	Part Number	Description	
4	9452-585-003	Plate, Coin Vault	1
*	9349-034-001	Latch, Coin Vault Plate	1
5	9545-008-020	Screw, Coin Vault Plate Mtg.	1


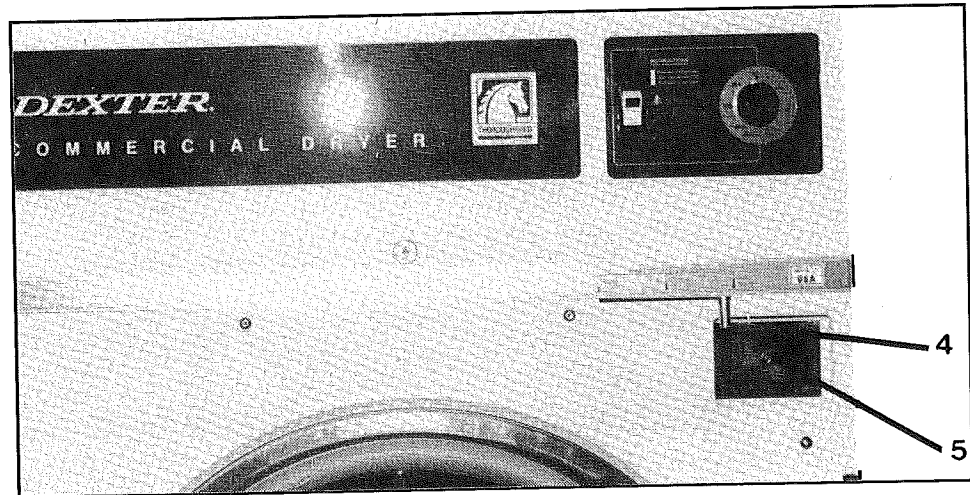


CABINET GROUP

Computer Only

Key	Part Number	Description	
1	9578-085-001	Trim, Upper Door	1
2	9412-083-002	Nameplate, Computer Dryer	1
3	9454-569-005	Panel, Front (White)	1
3	9454-569-008	Panel, Front (Almond) *	1
3	9454-569-010	Panel, Front (S.S.)	1

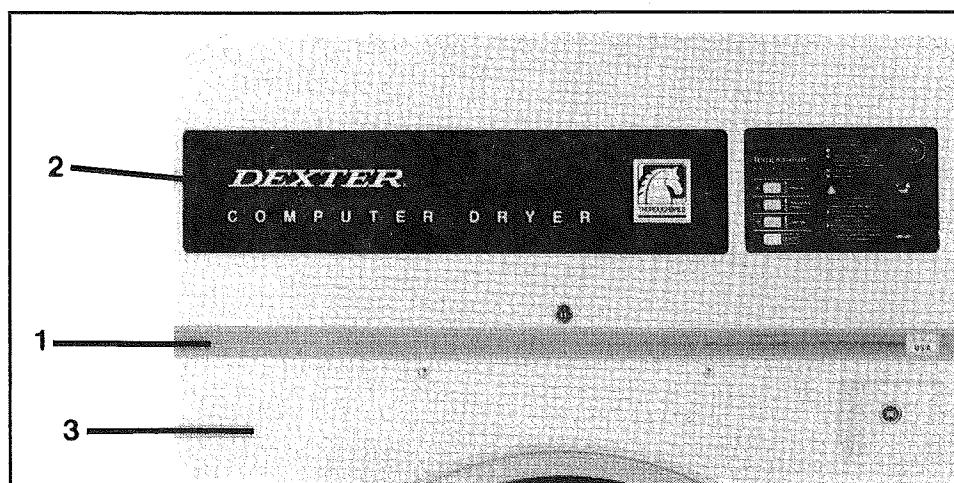


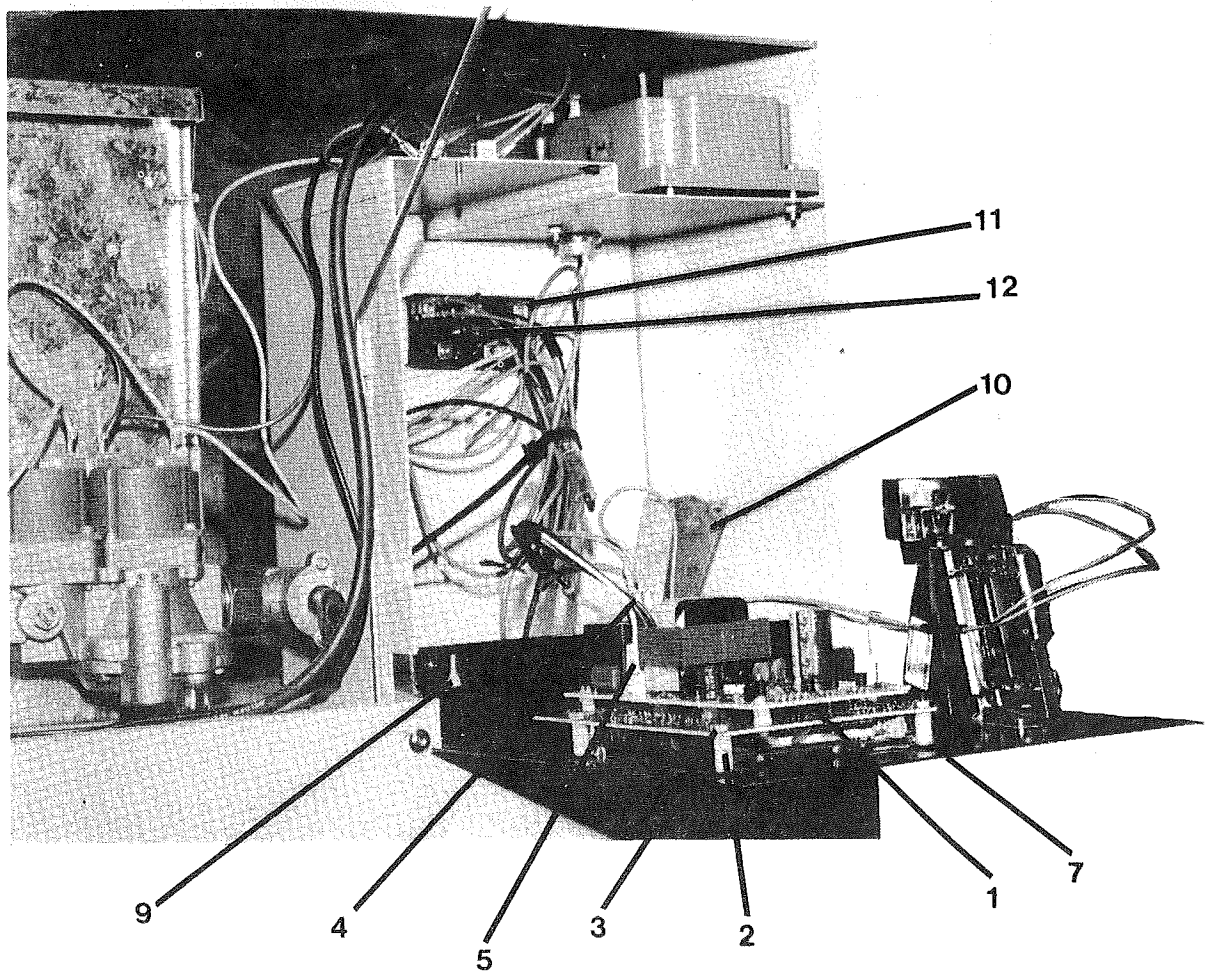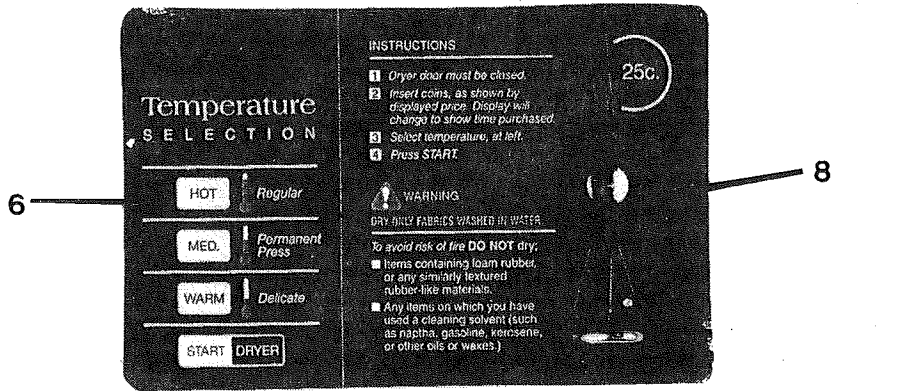


CONTROL HOUSING GROUP

Computer Only

Key	Part Number	Description	
1	9471-005-001	Electronic Control	1
2	9538-157-001	Spacers, Circuit Board	4
3	8640-411-001	Nut, Circuit Board	4
*	8641-582-005	Lock washer, Circuit Board	1
4	8653-074-001	Terminal, Chair Type (relay)	1
5	9627-651-001	Harness, Wiring (electronic control)	1
6	9801-058-005	Switch Assy., Membrane	1
7	9982-281-004	Plate Assy., Electronic Control	1
*	9545-008-006	Screw, Plate Assy. Mtg. (bottom)	2
*	9545-045-002	Screw, Mtg. (top)	1
8	8502-640-002	Label, Control Instruction/Warning	1
9	9051-021-000	Bumper	2
10	9940-013-001	Chute Assy., Coin	1
*	9545-008-006	Screw	1
11	9897-026-001	Terminal Block	1
12	9545-031-004	Screw, Terminal Block Mtg	2
*	9053-067-001	Bushing, Door Switch Wires	1

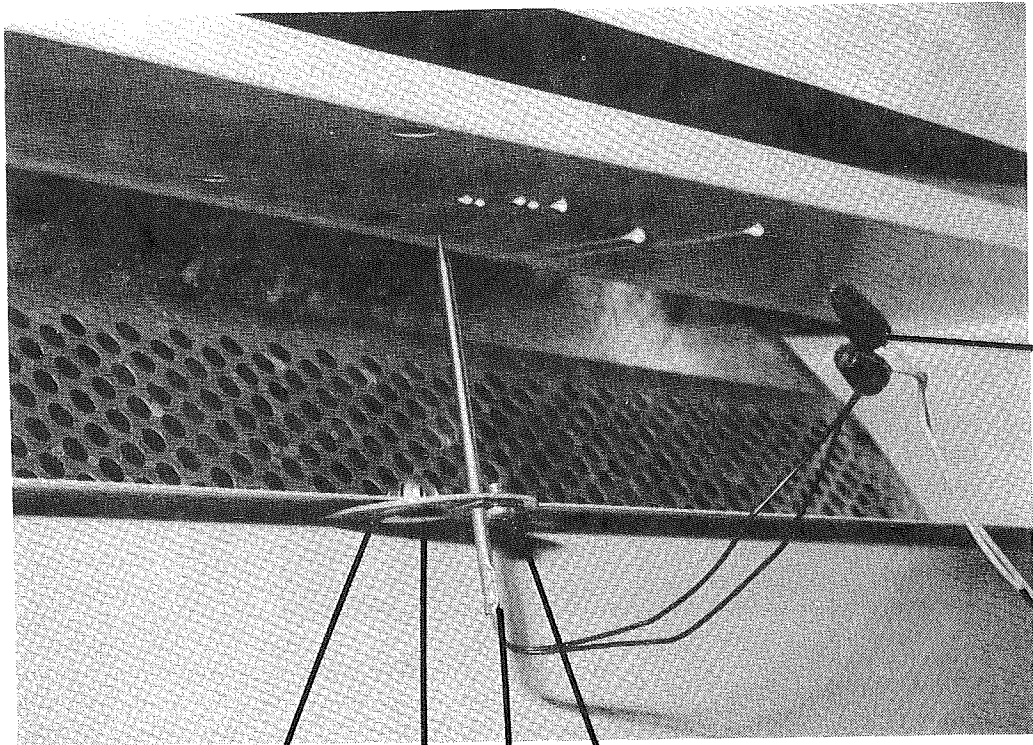

13
14
15
16
17
18

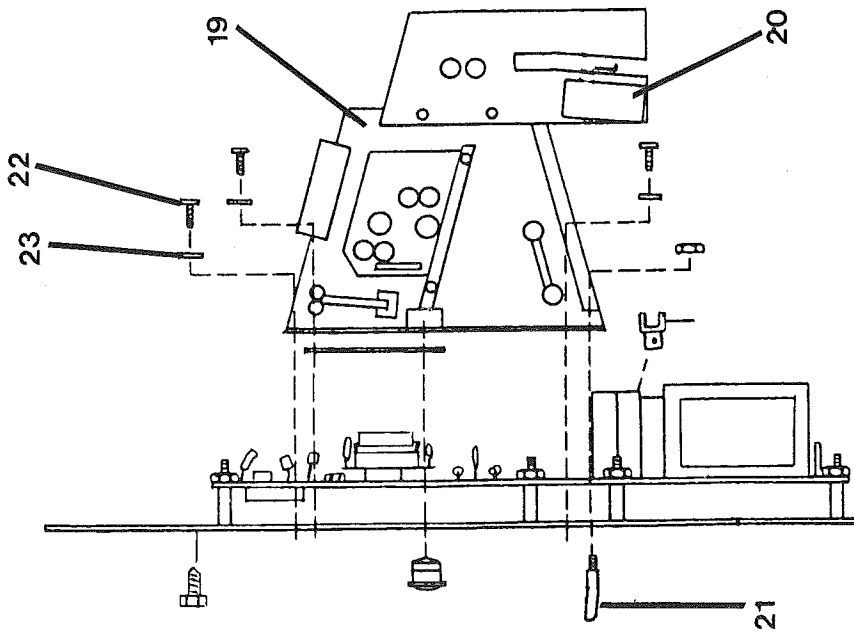



19
20
21
22
23

CONTROL HOUSING GROUP

Computer Only

(continued)

Key	Part Number	Description	
13	9501-004-002	Sensor Assy., Temperature	1
*	9209-037-002	Grommet, Temperature Cable	2
*	9083-113-001	Clip, Temp Sensor Wires	3
14	9627-679-001	Sensor Harness	1
15	8640-276-005	Nut, Wire	2
16	9452-614-001	Plate, Sensor mtg.	1
17	9545-045-005	Screw, Sensor to Mtg. Plate.....	1
18	8651-053-004	Plug, Button (mtg. plate to cabinet).....	1
19	9021-002-005	Coin Acceptor Complete	1
		(includes the following parts)	
20	9732-126-001	Switch, Coin	1
21	9063-004-001	Bail, Coin Return	1
22	9545-025-001	Screw, Acceptor Mtg.	2
23	8641-573-012	Lock washer	2

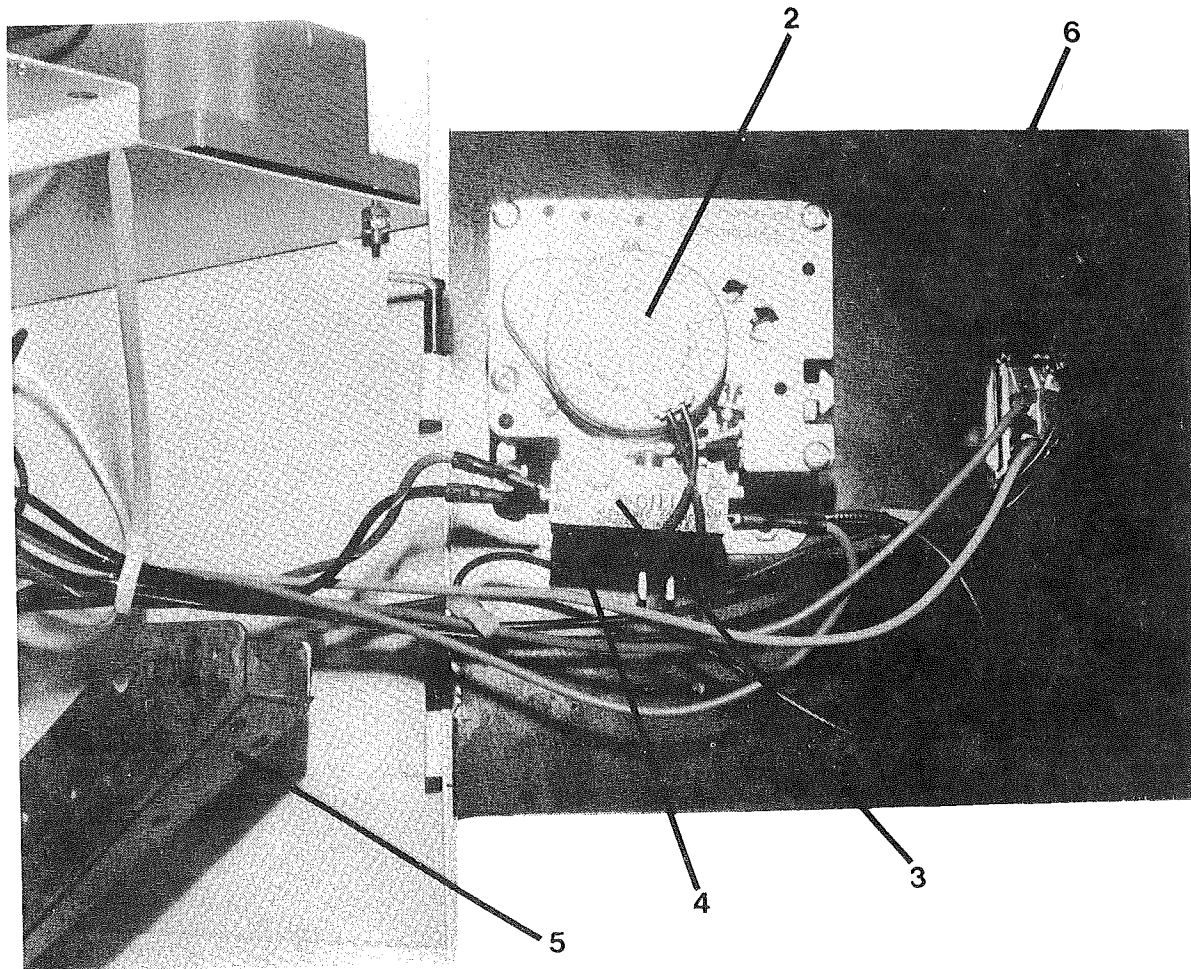
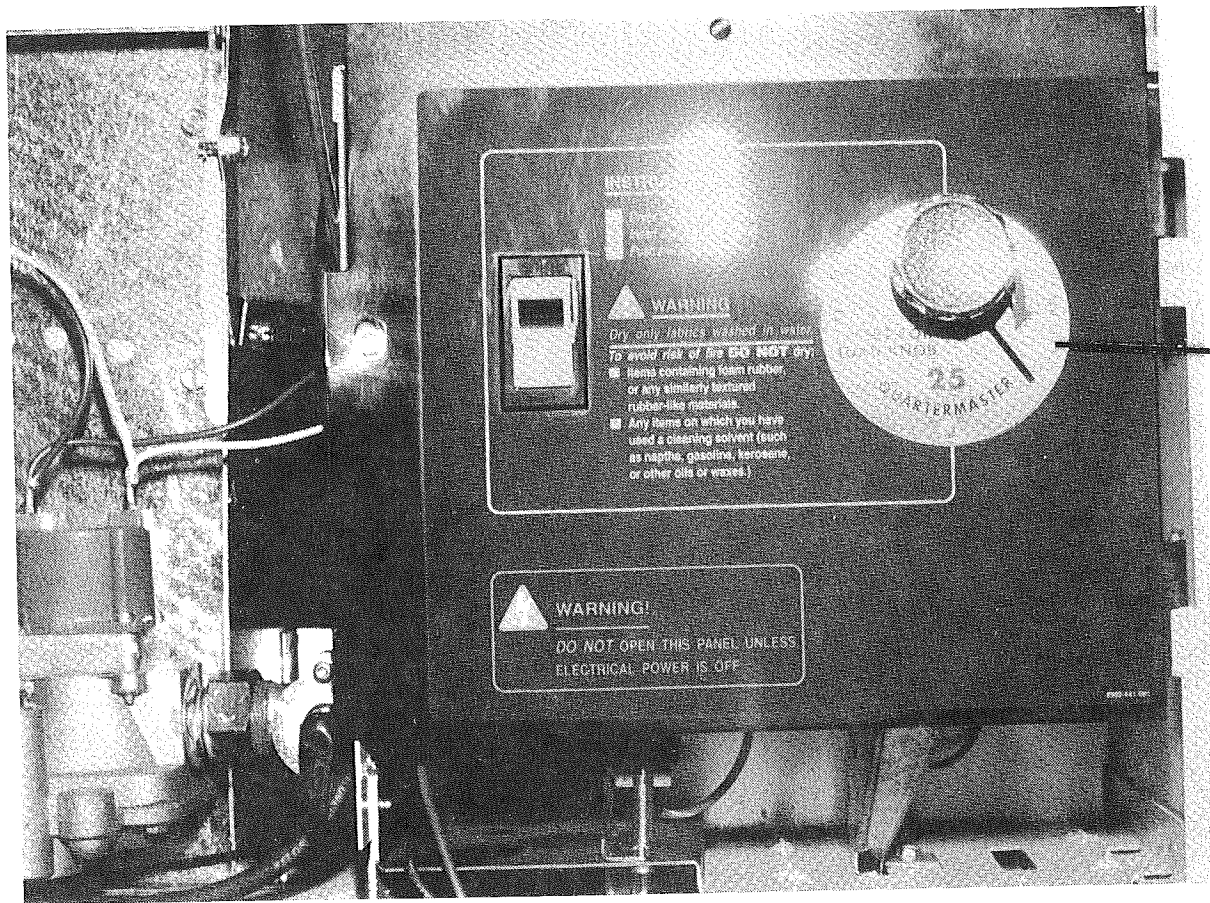


CONTROL HOUSING GROUP

Rotary Meter Only

Key	Part Number	Description	
1	9944-038-027	Meter Assy., Coin (includes the following parts)	1
2	9376-212-001	Motor	1
3	9539-444-002	Switch, Cool Down (B)	1
4	9539-444-001	Switch, Motor Start (A)	1
5	9940-015-001	Chute Assy., Coin	1
*	9545-008-006	Screw	1
*	8641-581-006	Washer, Flat (meter assy. mtg.)	2
*	8641-582-006	Lock washer (meter assy. mtg.)	2
*	8640-413-001	Nut, (meter assy. mtg.)	2
6	9982-285-002	Plate, Meter Mtg.	1
*	9095-032-006	Cam, Timing (4 pin)	1
*	9095-032-007	Cam, Timing (5 pin)	1
*	9095-032-002	Cam, Timing (6 pin)	1
*	9095-032-011	Cam, Timing (7 pin)	1
*	9095-032-001	Cam, Timing (8 pin)	1
*	9095-032-003	Cam, Timing (9 pin)	1
*	9095-032-004	Cam, Timing (10 pin)	1
*	9095-032-012	Cam, Timing (11 pin)	1
*	9095-032-005	Cam, Timing (12 pin)	1

9732-122-001 - Box
8650-012-002 - Lock

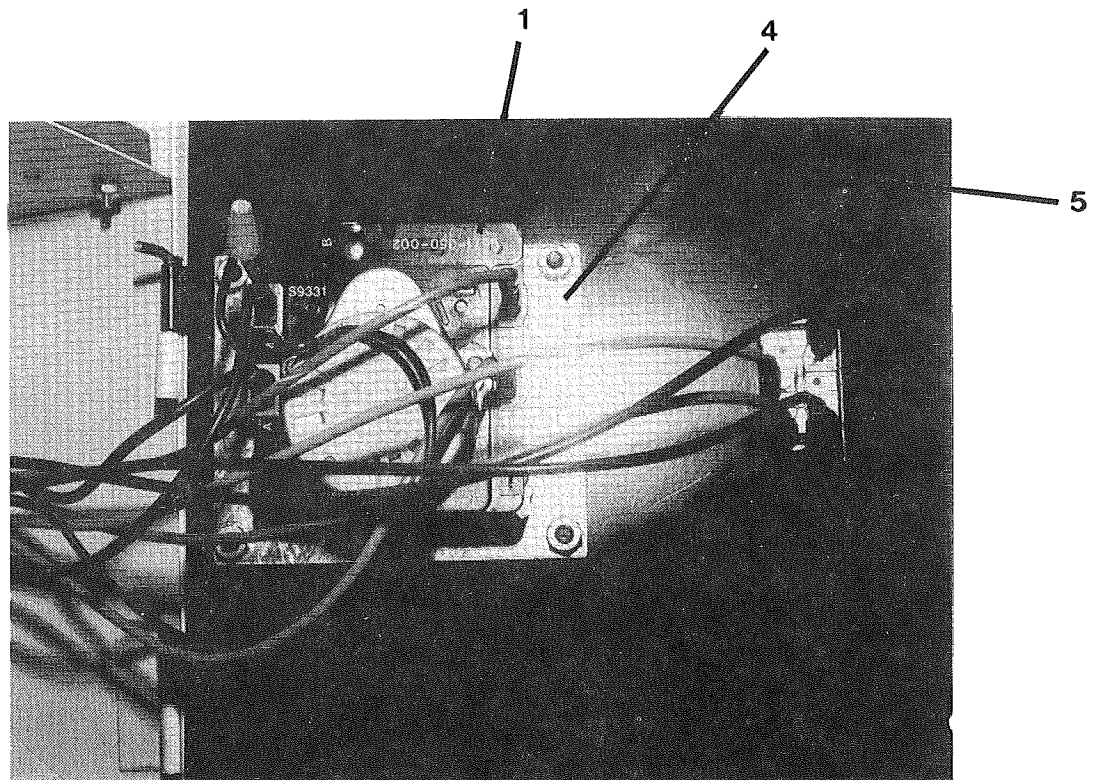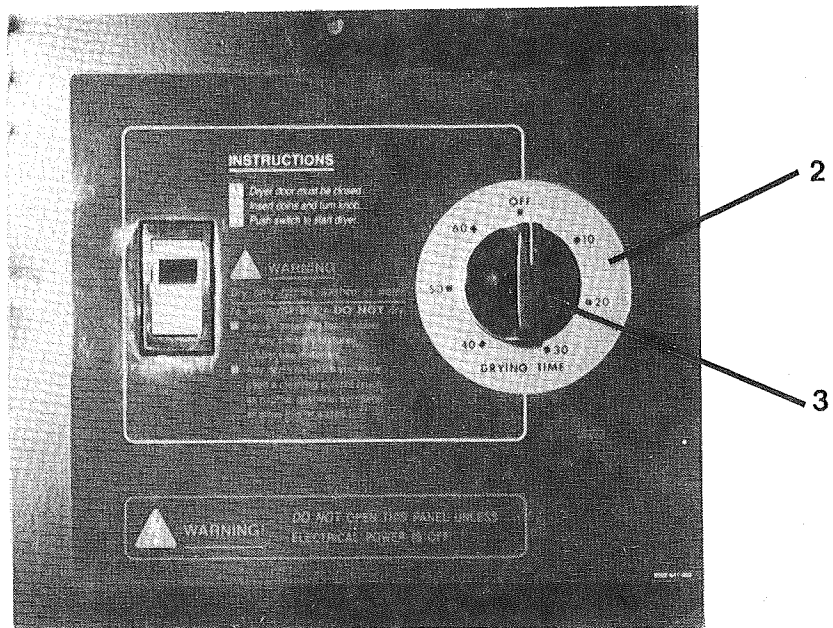


CONTROL HOUSING GROUP

Manual Timer Only

Key	Part Number	Description	
1	9571-350-002	Timer, 60 Minute	1
2	9107-065-001	Dial, Timer	1
3	9307-176-001	Knob, Timer	1
4	9452-574-001	Plate, Timer Mtg. (adapter)	1
*	8640-413-001	Nut, Timer Mtg.	4
*	9545-010-003	Screw, Timer Mtg.	2
5	9982-285-004	Plate, Timer Mtg.	1


order 2

*Cool down
timer
9571-350-002*

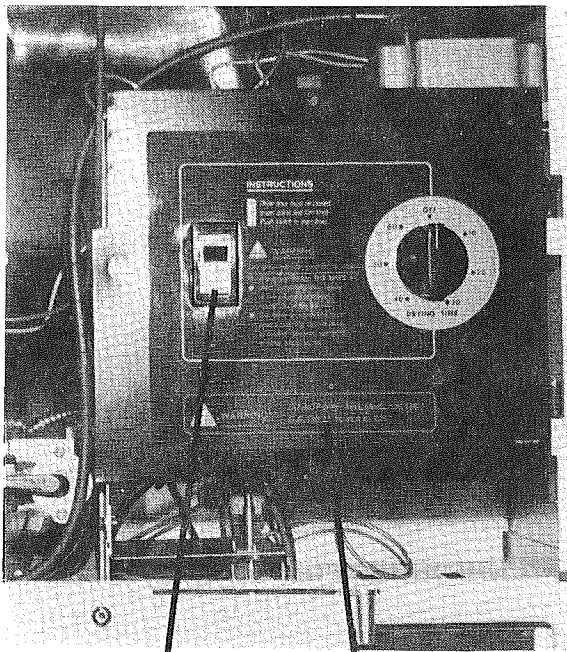


1

2

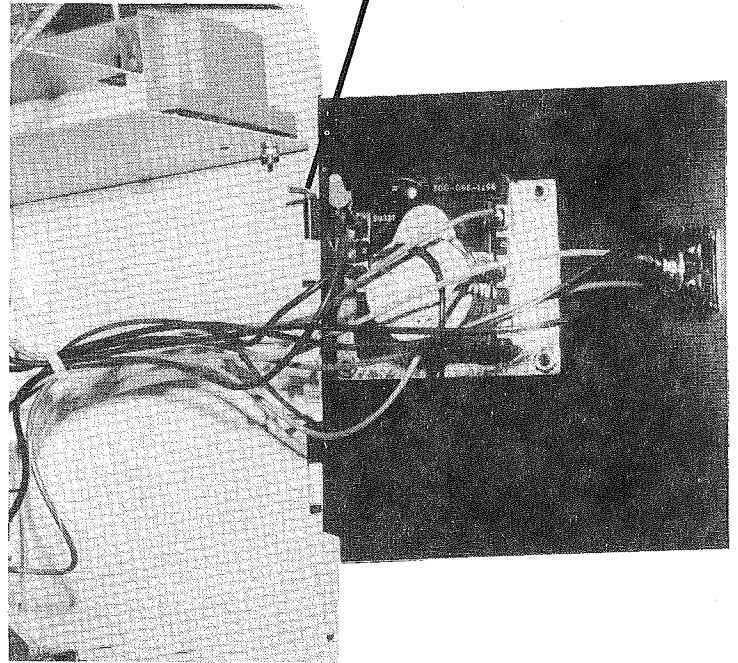

3

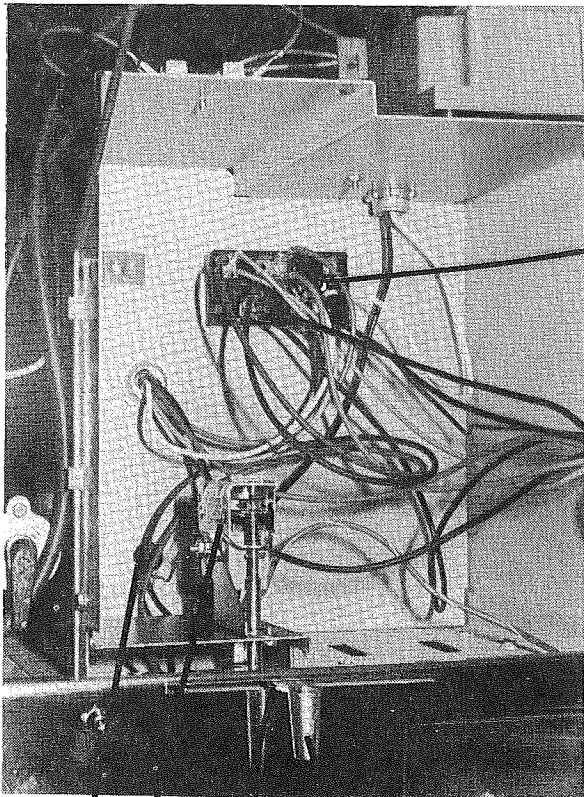

5


4

6

7

8


5

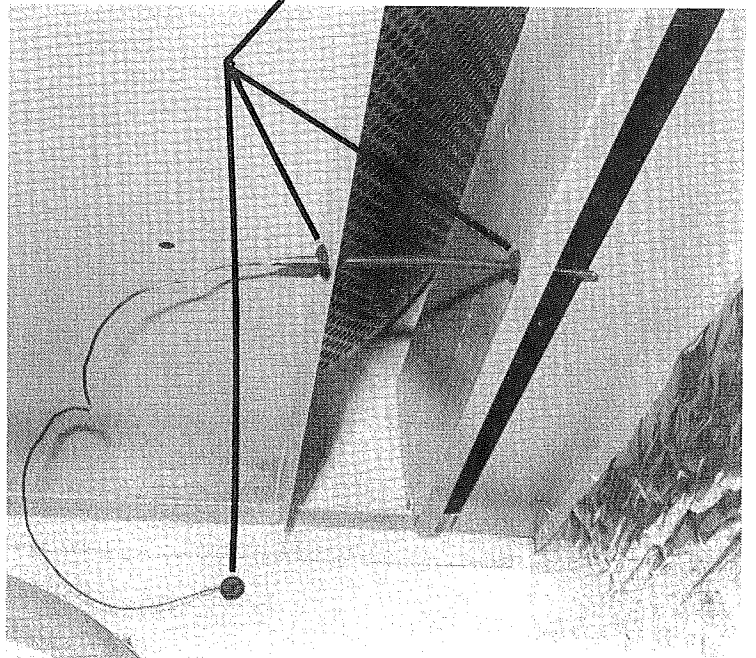

CONTROL HOUSING GROUP

Rotary Meter & Manual Timer


Key	Part Number	Description	
1	9539-460-001	Switch, Push to Start	1
2	8502-641-002	Label, Control Instruction/Warning	1
3	9451-146-005	Pin, Hinge (timer plate)	2
4	9576-206-001	Thermostat.....	1
5	9209-037-002	Grommet, Temperature Cable	4
*	9029-063-001	Bracket	1
*	9083-113-001	Clip, Capillary Tube	3
*	9545-044-004	Screw, Thermostat Mtg.	2
*	9545-045-001	Screw, Bracket	2
6	9348-056-003	Lever, Thermostat	1
7	9307-162-001	Knob, Thermostat	1
*	9545-010-008	Screw, Thermostat Knob	1
8	9897-026-001	Terminal Block	1
*	9545-031-004	Screw, Terminal Block Mtg.	2
*	9053-067-001	Bushing, Door Switch Wires	1

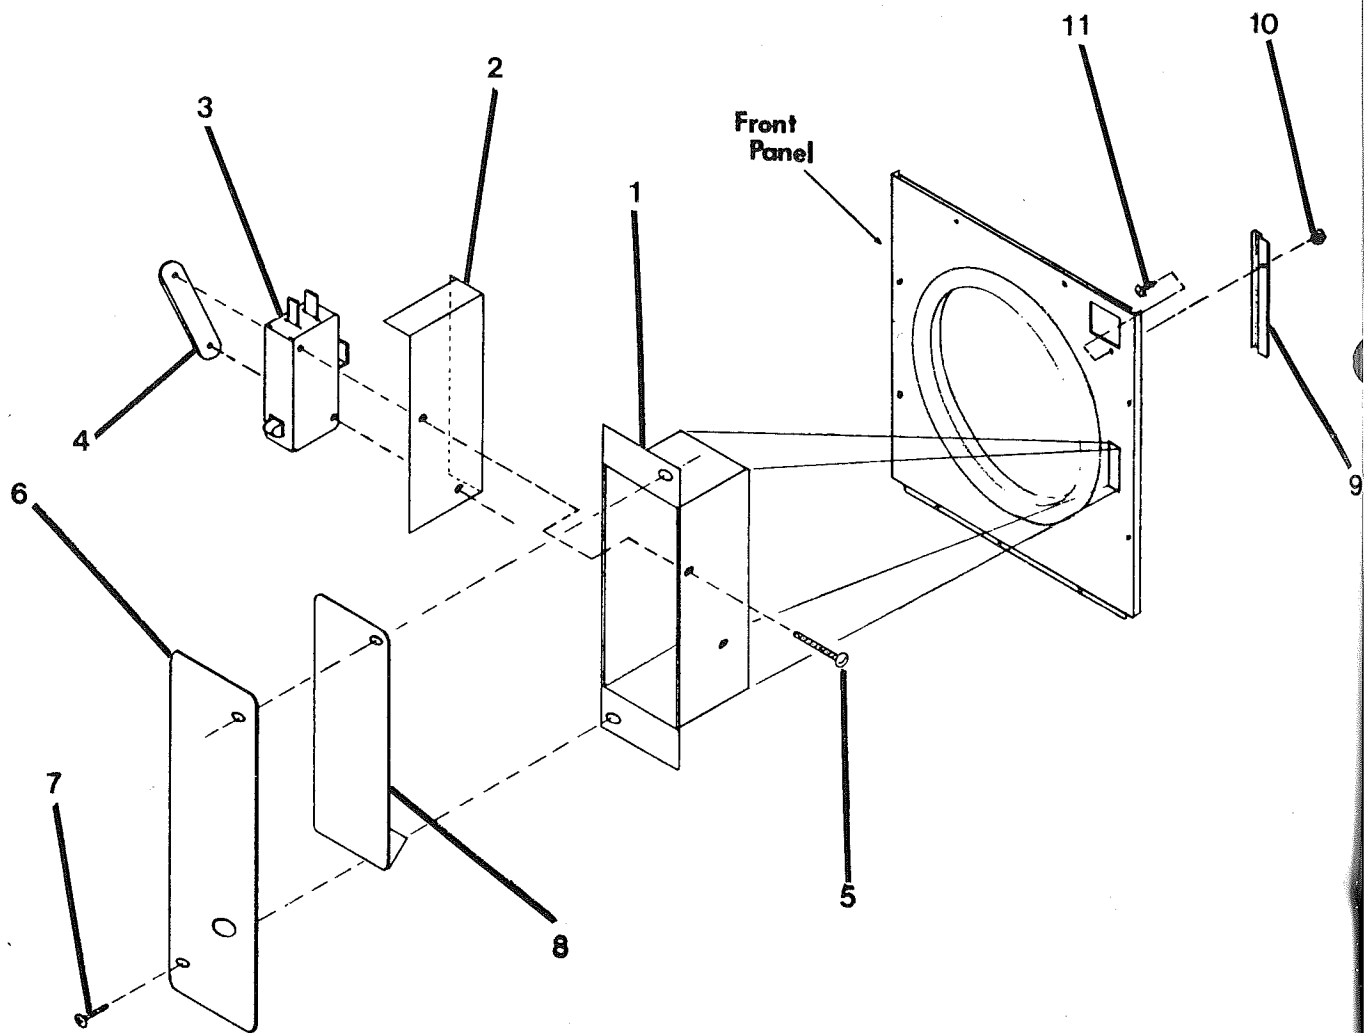

DOOR SWITCH GROUP

All Models

Key	Part Number	Description	
1	9041-076-001	Box, Door Switch	1
2	9550-159-001	Shield, Door Switch (insulator)	1
3	9539-461-001	Switch, Door	1
4	8640-401-001	Nut, Special Twin	1
5	9545-020-001	Screw, Door Switch Mtg	2
6	9074-255-001	Cover, Switch Box	1
7	9545-008-002	Screw, Box Cover	2
8	9008-004-001	Actuator, Switch	1
9	6068-041-001	Conduit, Switch Wires	1
10	9545-012-003	Screw, Conduit Mtg	1
11	8640-413-004	Nut, Elastic Stop (for screw above)	1

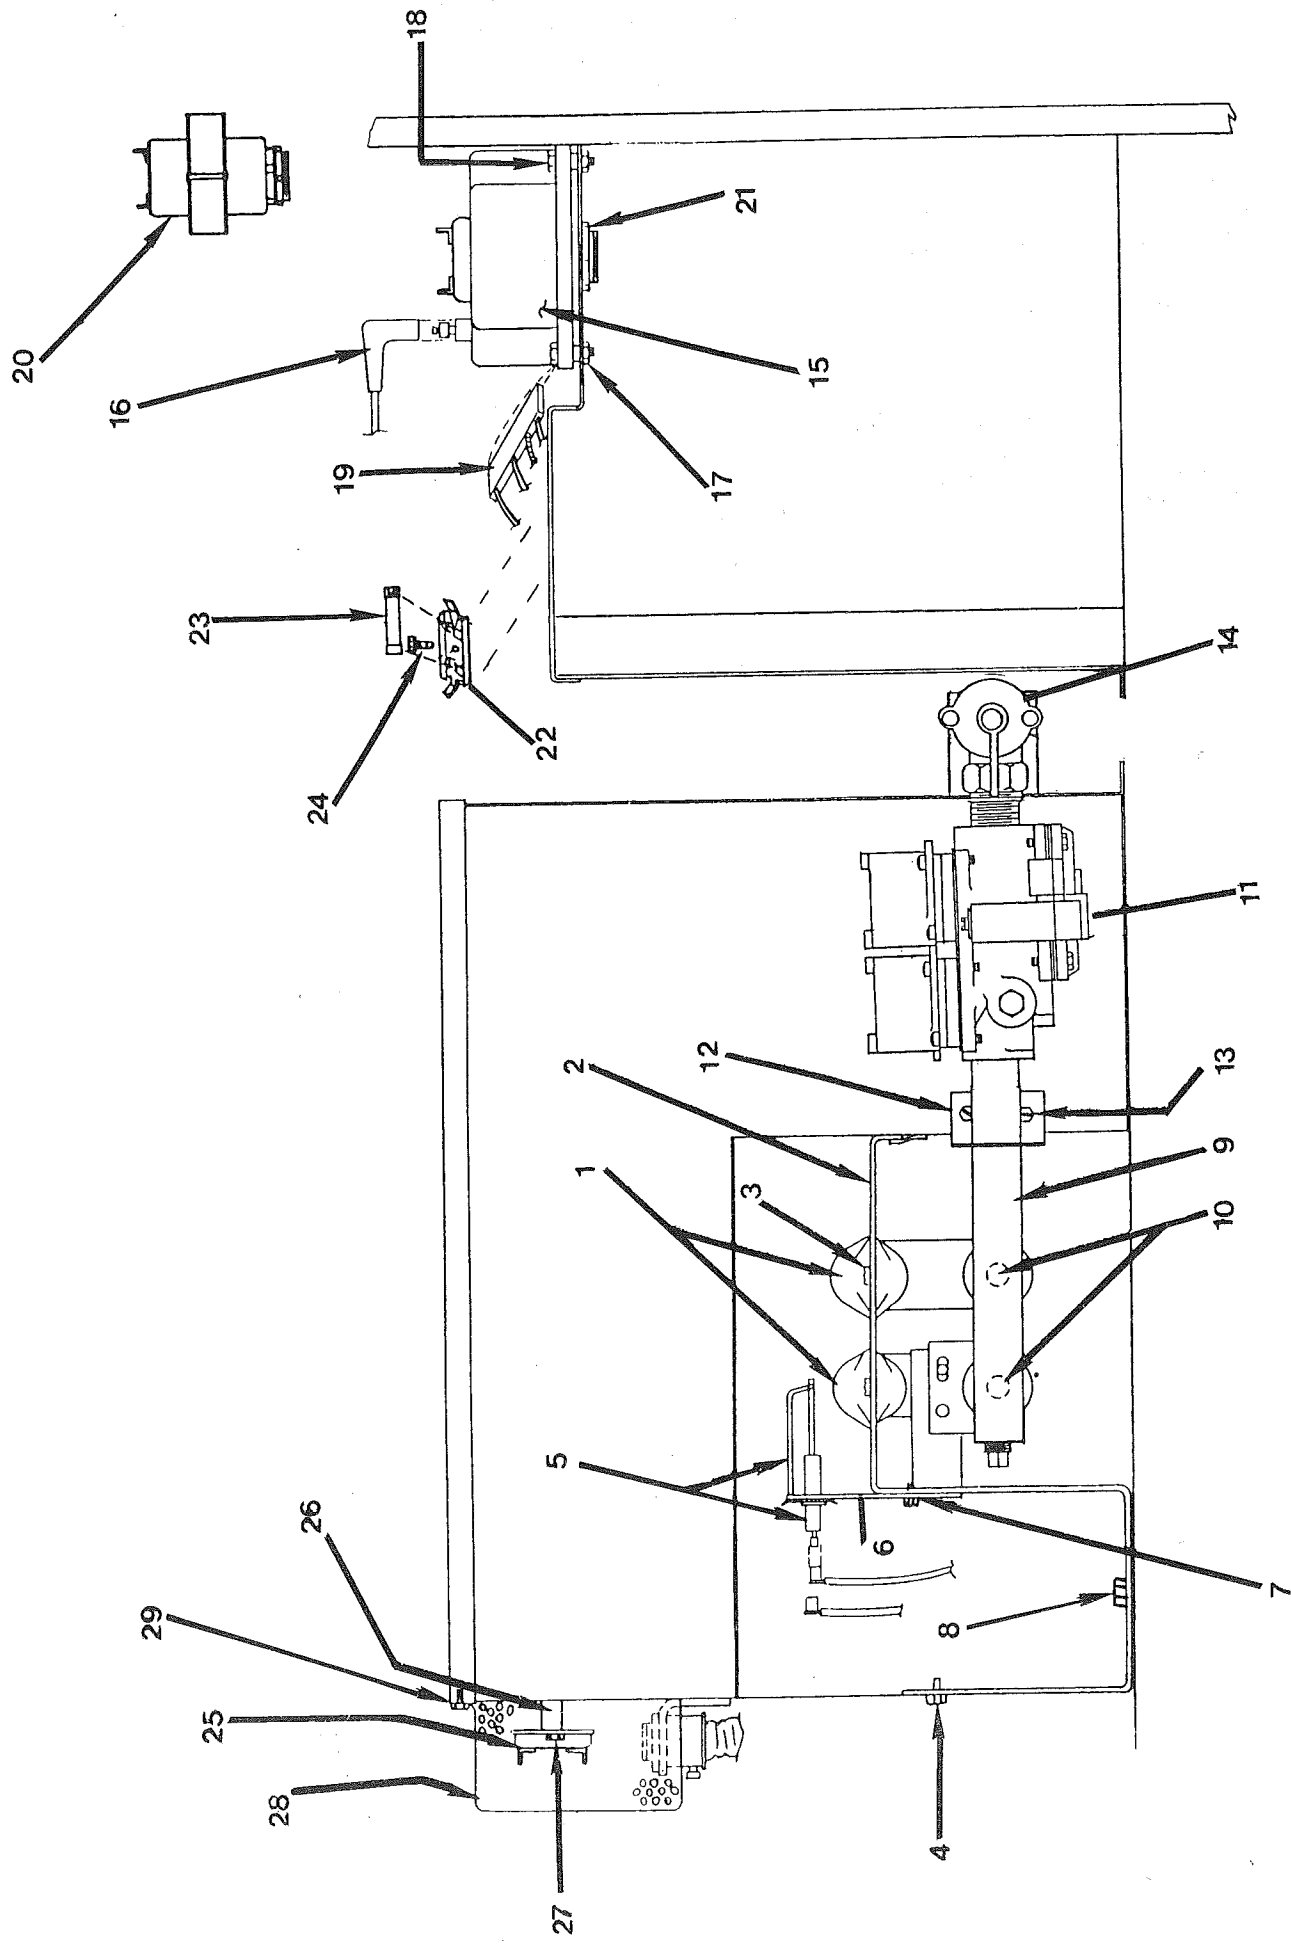

BURNER HOUSING GROUP

All Models

Key	Part Number	Description	
*	9803-163-002	Housing Assy., Burner	1
*	9918-002-002	Boot Assy., Recirculation	1
1	9048-018-001	Burner, Main	2
2	9548-256-001	Support, Front	1
3	9545-008-008	Screw, Burner to Support	2
4	9545-008-008	Screw, Support Bracket to Housing	1
5	9875-002-002	Electrode Assy., Ignition	1
6	9985-161-001	Bracket Assy., Electrode Mtg	1
*	9545-045-001	Screw, Electrode to Bracket	2
7	9545-008-008	Screw, Bracket to Support	4
8	9545-008-006	Screw, Support Bracket to Deck	1
9	9381-009-001	Manifold, Burner Assy.	1
10	9425-069-002	Orifice, Burner (Natural) #30	2
10	9425-069-003	Orifice, Burner (LP) #48	2
11	9857-117-001	Control Assy., Gas Valve	1
12	9039-915-001	Bracket, Gas Valve Mtg.	1
13	9545-008-003	Screw, Gas Valve Mtg. Bracket	2
14	9379-164-001	Valve, Gas Shut off	1
*	9458-020-001	Pipe, Gas Line	1
15	9857-116-001	Control, Ignition	1
*	9039-981-001	Bracket, Ignition Control Mtg.	1
16	9631-403-001	Wire, Hi Voltage	1
17	8640-411-003	Nut, Control Mtg.	2
18	9545-044-002	Screw, Control Mtg.	2
*	8654-127-001	Clamp, Hi Voltage Wire	4
19	9627-650-001	Harness, Low Voltage Ignition	1
20	8711-002-001	Transformer, Ignition Control	1
21	8640-397-002	Nut, Transformer Mtg.	1
22	9054-045-001	Fuse holder	1
23	8636-018-001	Fuse	1
24	9545-031-005	Screw, Fuse Holder	1
25	9576-203-002	Thermostat, Hi-Limit	1
26	9538-142-001	Spacer, Hi-Limit	2
27	9545-045-007	Screw, Hi-Limit Mtg.	2
28	9074-234-001	Cover, Hi-Limit	1
29	9545-008-006	Screw, Cover Mtg	2
*	9452-615-001	Plate, High-Limit	1
*	9732-075-001	Kit, LP Conversion	1

Automatic


Thermostat
9857-209-001

SAFETY SHUTOFF THERMOSTAT

All Models


Key	Part Number	Description	
1	9576-207-002	Thermostat, Safety Shutoff	1
*	9545-045-008	Screw, Safety Stat Mtg	2
2	9825-057-001	Cover, Safety Stat	1
3	9545-008-006	Screw, Safety Stat Cover Mtg	2

Manually reset

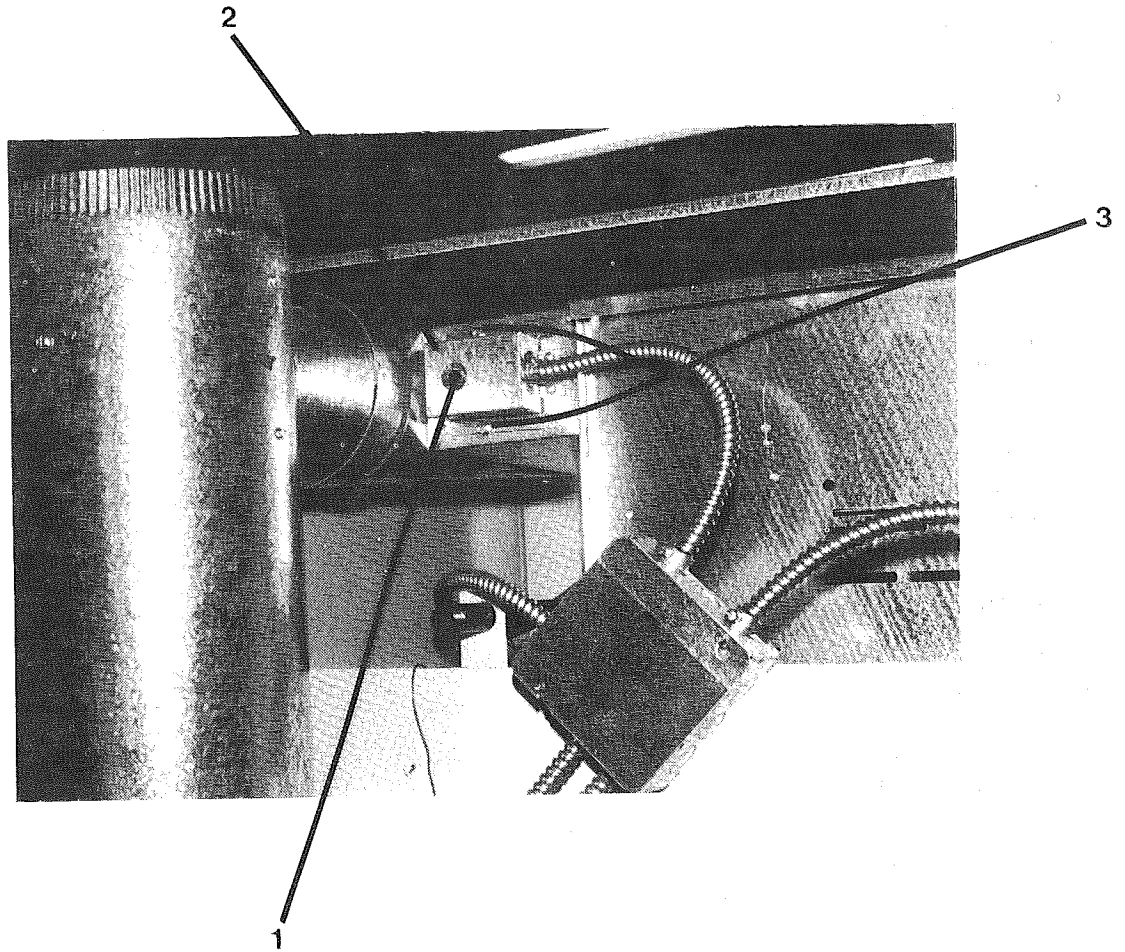


DAMPER SWITCH AND BLOWER IMPELLER GROUP All Models

Key	Part Number	Description	
1	9539-432-001	Switch, Damper	1
2	9545-044-002	Screw, Switch Mtg. & Adj.	3
*	8640-411-003	Nut, Switch Locking	1
3	8640-420-001	Nut, Switch Mtg. (tandem)	1
4	9125-001-001	Damper	1
5	9451-146-001	Pin, Damper	1
*	9074-242-001	Cover, Damper Switch	1
6	9278-037-001	Impeller, Blower	1
7	9545-028-013	Set Screw	2

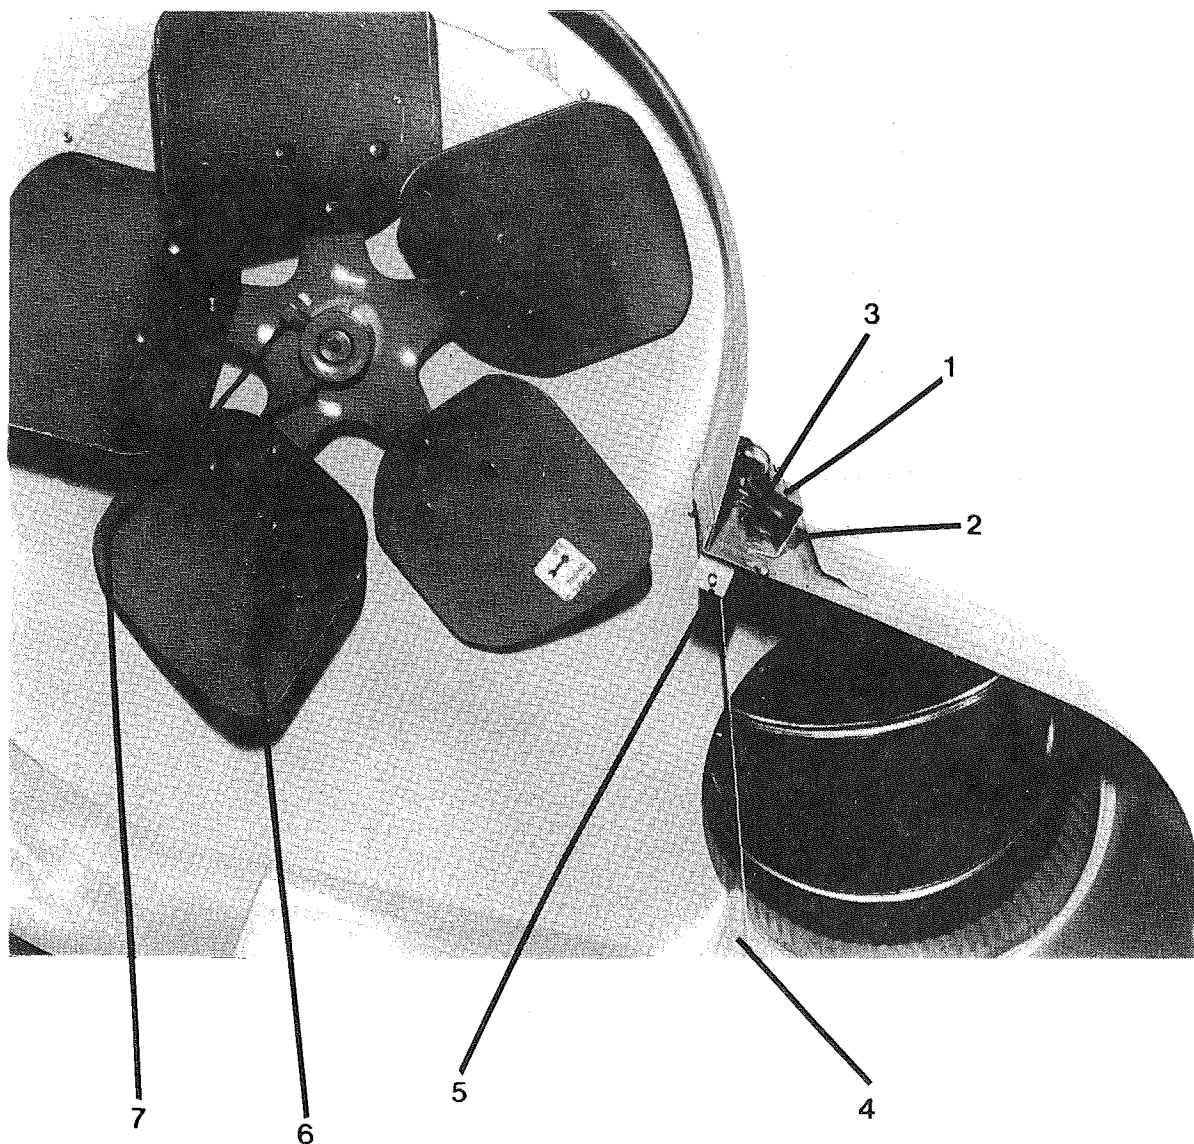

LINT HOOD AND SCREEN GROUP All Models


Key	Part Number	Description	
1	9822-027-002	Lint Hood Assy	1
2	9822-026-001	Lint Screen Assy	1
3	8640-412-004	Nut, Lint Hood Mtg	6


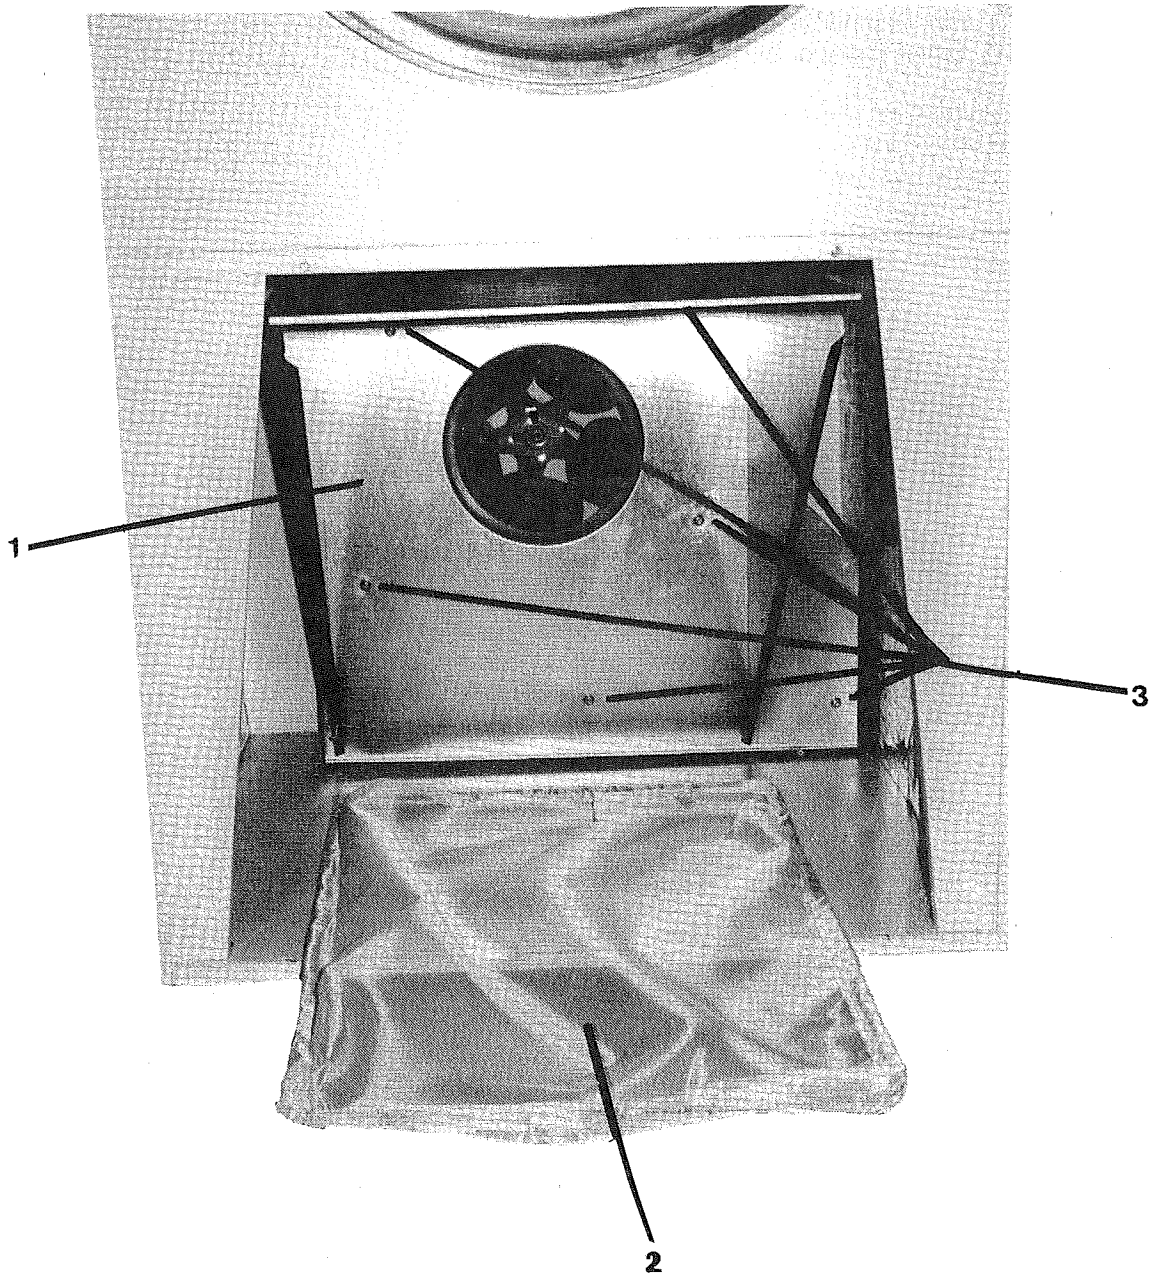


TUMBLER GROUP

All Models

Key	Part Number	Description	
1	9848-101-001	Tumbler Assy	1
2	9568-009-002	Spider & Shaft Assy	1
3	9497-019-001	Rod, Tumbler	3
4	8640-415-001	Nut, Tumbler Rod	3
5	9552-013-000	Shim	AR
6	8641-582-003	Washer, Tumbler Rod (spring lock)	3
7	8641-554-001	Washer, Tumbler Rod (special)	3
8	9306-006-000	Key, Tumbler Shaft	1
9	8641-582-015	Lock Washer, Tumbler Shaft	1
10	8640-222-000	Nut, Tumbler Shaft	1

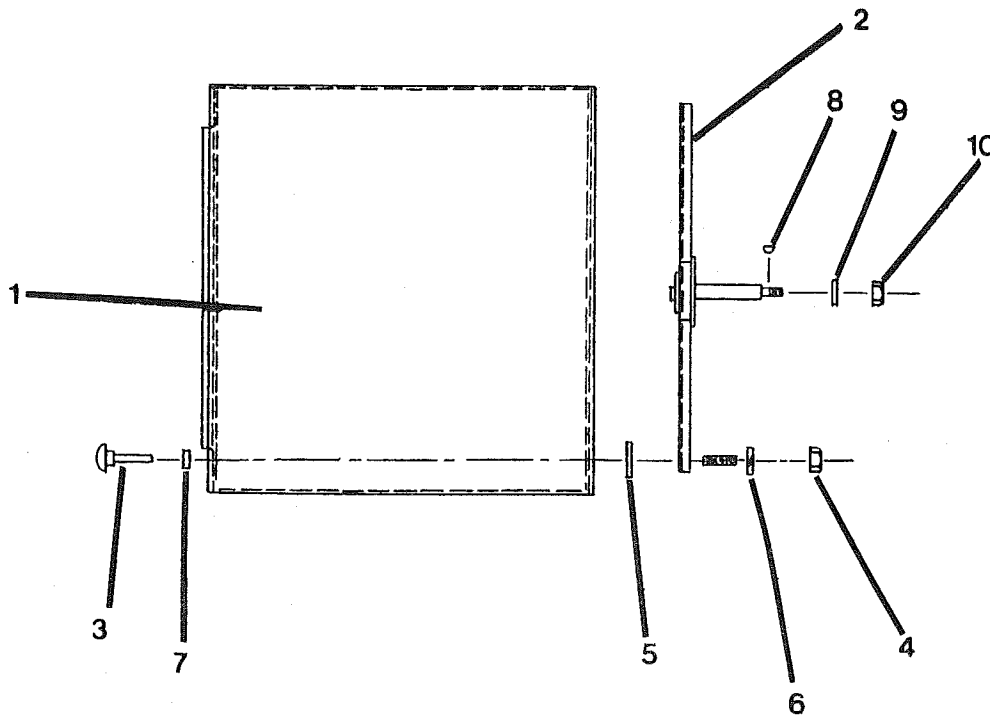


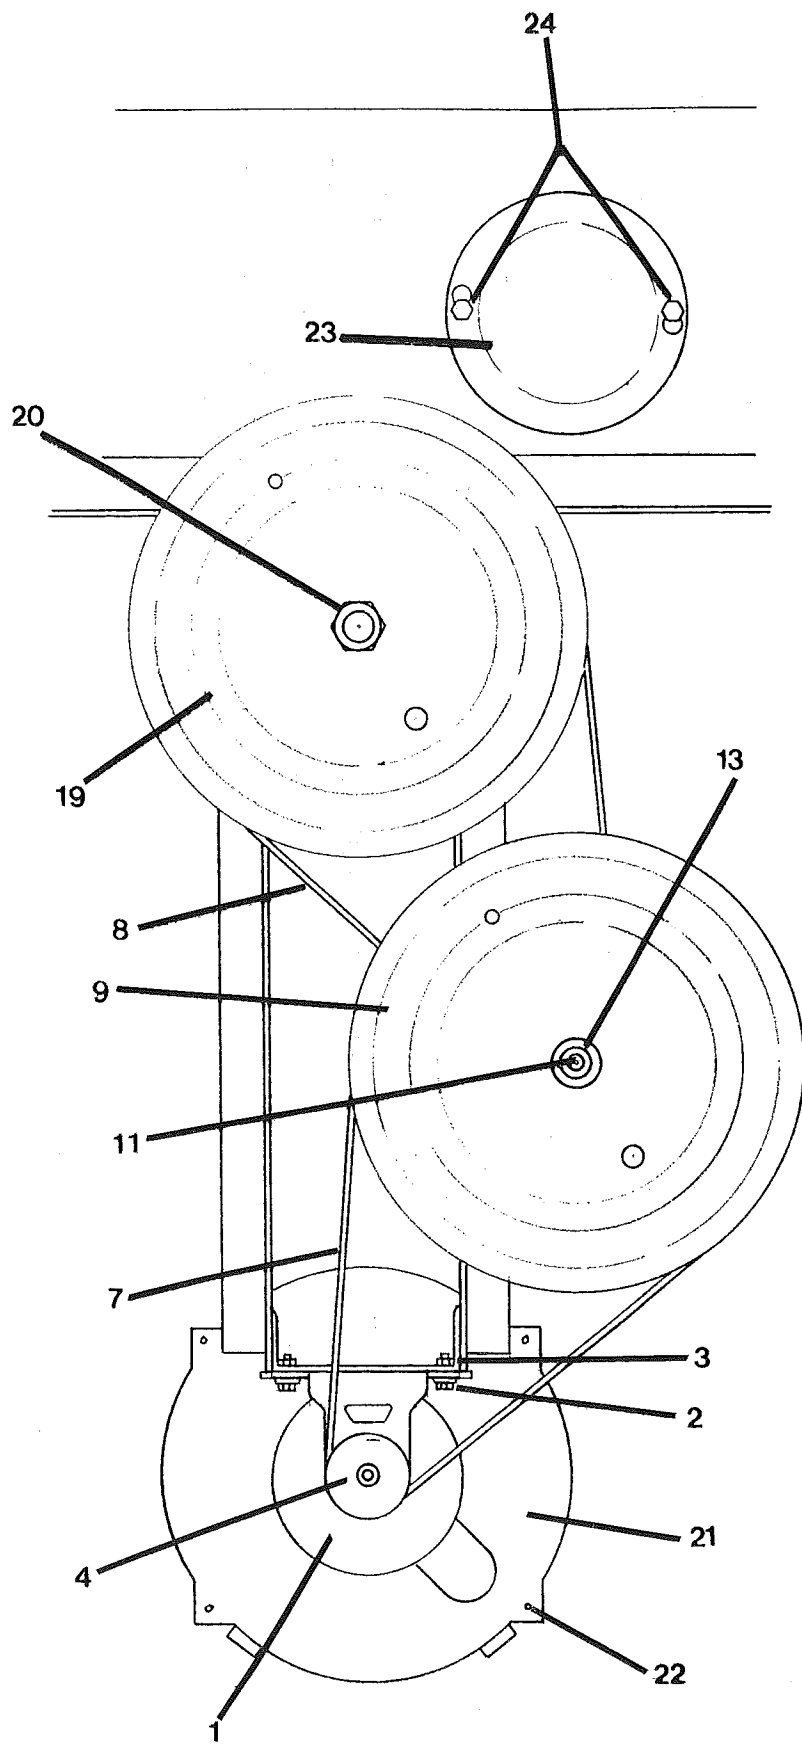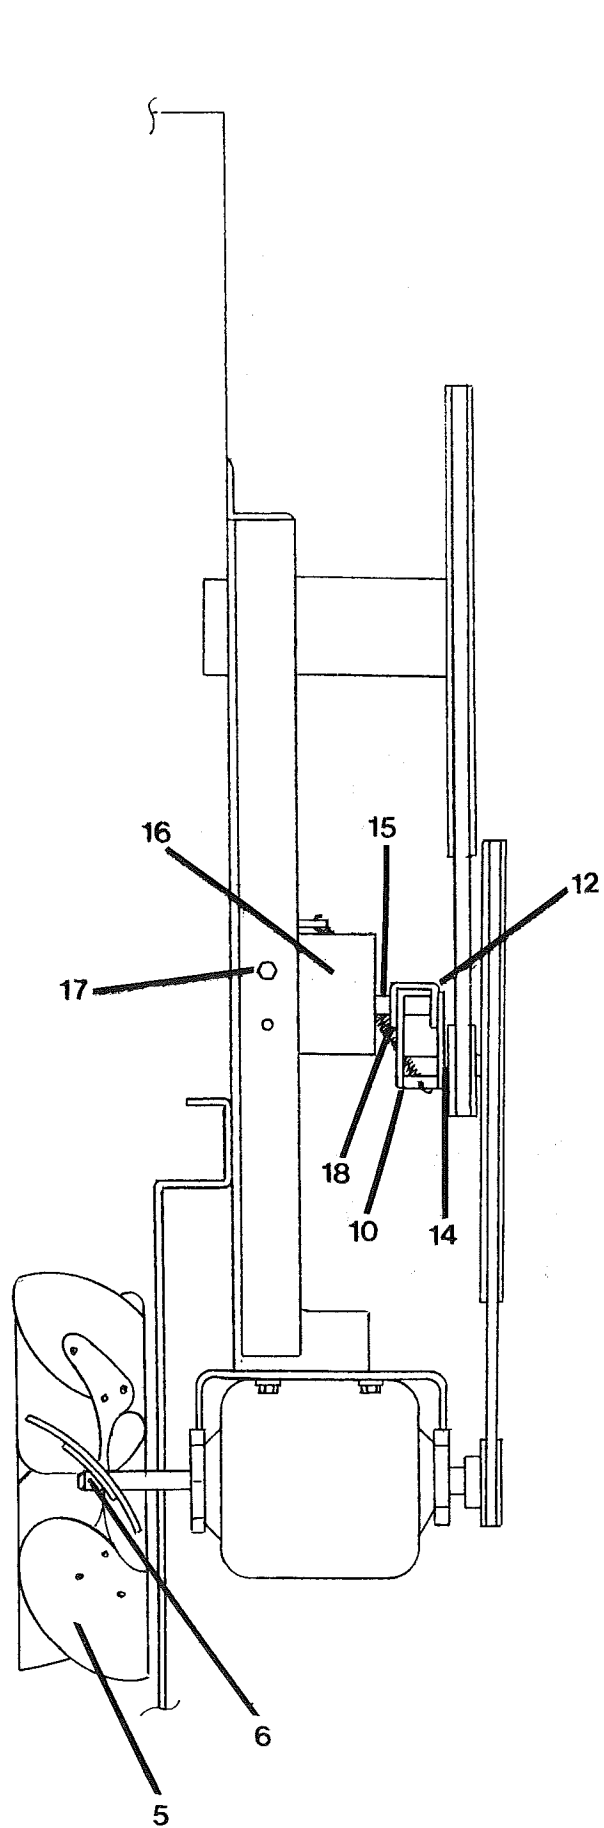

PULLEY, BELT, AND MOTOR GROUP

All Models


Key	Part Number	Description	
1	9376-259-006	Drive Motor, 115V	1
2	9545-014-004	Bolt, Motor Mtg	4
3	8640-400-003	Nut, Hex	4
4	9453-157-001	Pulley, Motor (60hz)	1
*	9545-028-013	Set Screw	2
5	9278-037-001	Impeller, Blower	1
6	9545-028-013	Set Screw	2
7	9040-073-003	Belt, Motor (narrow)	1
8	9040-073-004	Belt, Tumbler (wide)	1
9	9908-039-001	Pulley Assy., Intermediate	1
*	9036-145-002	Bearing Assy. (included in above)	2
10	9861-015-001	Arm, Tension (short)	1
11	9182-015-001	Fitting, Grease (include in above)	1
12	9861-016-001	Arm, Tension	1
13	9487-200-003	Ring, Retaining	4
14	8641-224-000	Washer, Special	1
15	9451-141-001	Pin, Pivot	1
16	9985-151-001	Bracket Assy., Pivot	1
17	9545-014-005	Bolt, Pivot Bracket	3
*	8640-400-002	Nut, Pivot Bracket	3
18	9534-319-002	Spring, Tension	1
19	9908-040-001	Pulley Assy., Tumbler	1
20	8640-222-000	Nut, Tumbler Shaft	1
*	9306-006-000	Key, Tumbler Shaft	1
21	9074-180-001	Cover, Impeller	1
22	9545-008-001	Screw, Impeller Cover	4
23	9452-253-000	Inspection Plate	1
24	9545-008-006	Screw, Inspection Plate	2

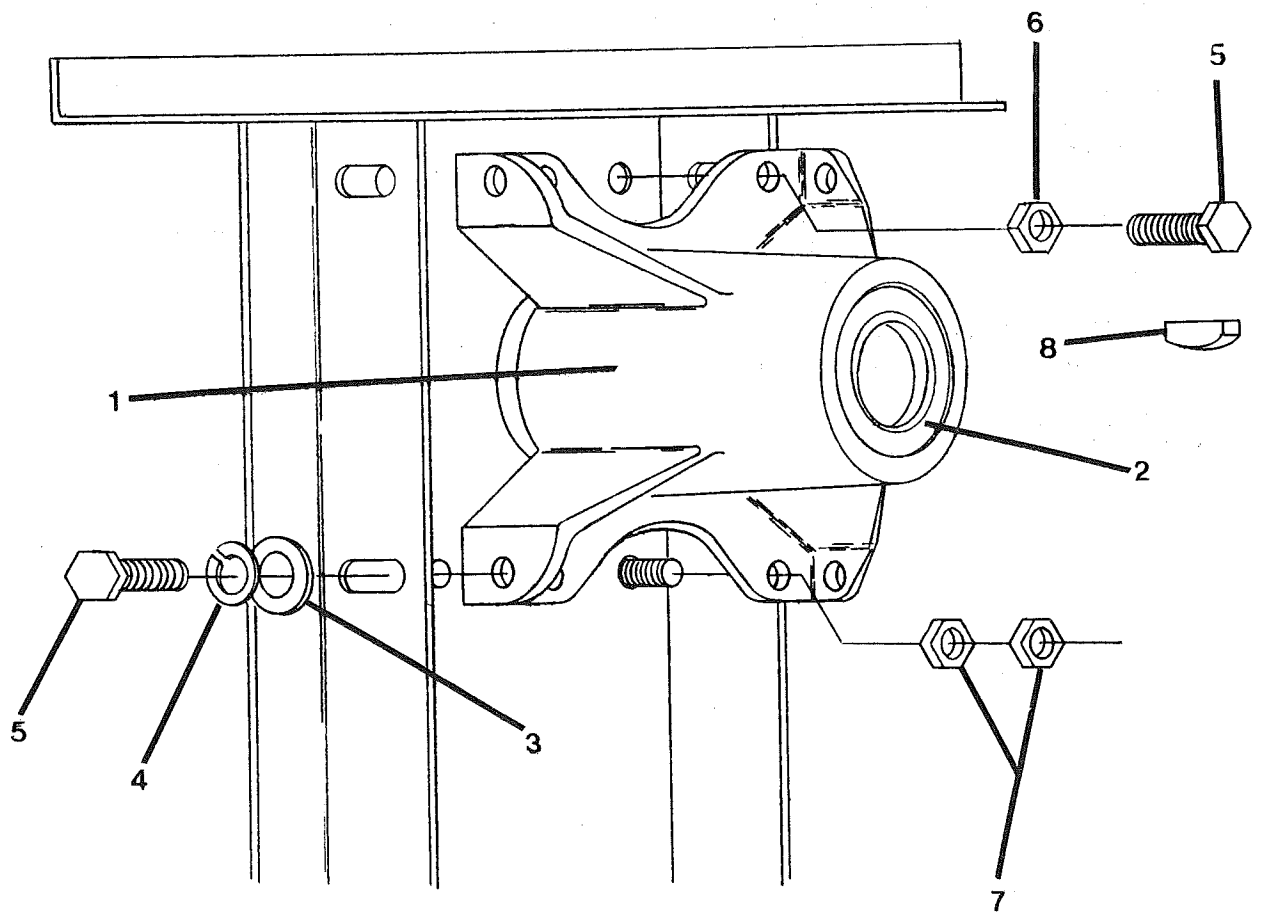

BEARING HOUSING GROUP

All Models

Key	Part Number	Description	
	9803-160-002	Housing Assy., Complete Bearing	1
1	9241-161-001	Housing, Bearing (included in assy.)	1
2	9036-130-001	Bearing, Ball (included in assy.)	2
*	9538-139-001	Spacer, Bearing (included in assy.)	1
3	8641-581-009	Washer, Flat	4
4	8641-582-003	Lock washer	4
5	9545-049-001	Bolt, 3/8 x 1	6
6	8640-415-002	Nut, 3/8	2
7	8640-400-002	Nut, 5/16	4
*	8640-222-000	Nut, Tumbler Shaft	1
8	9306-006-000	Key, Tumbler Shaft	1

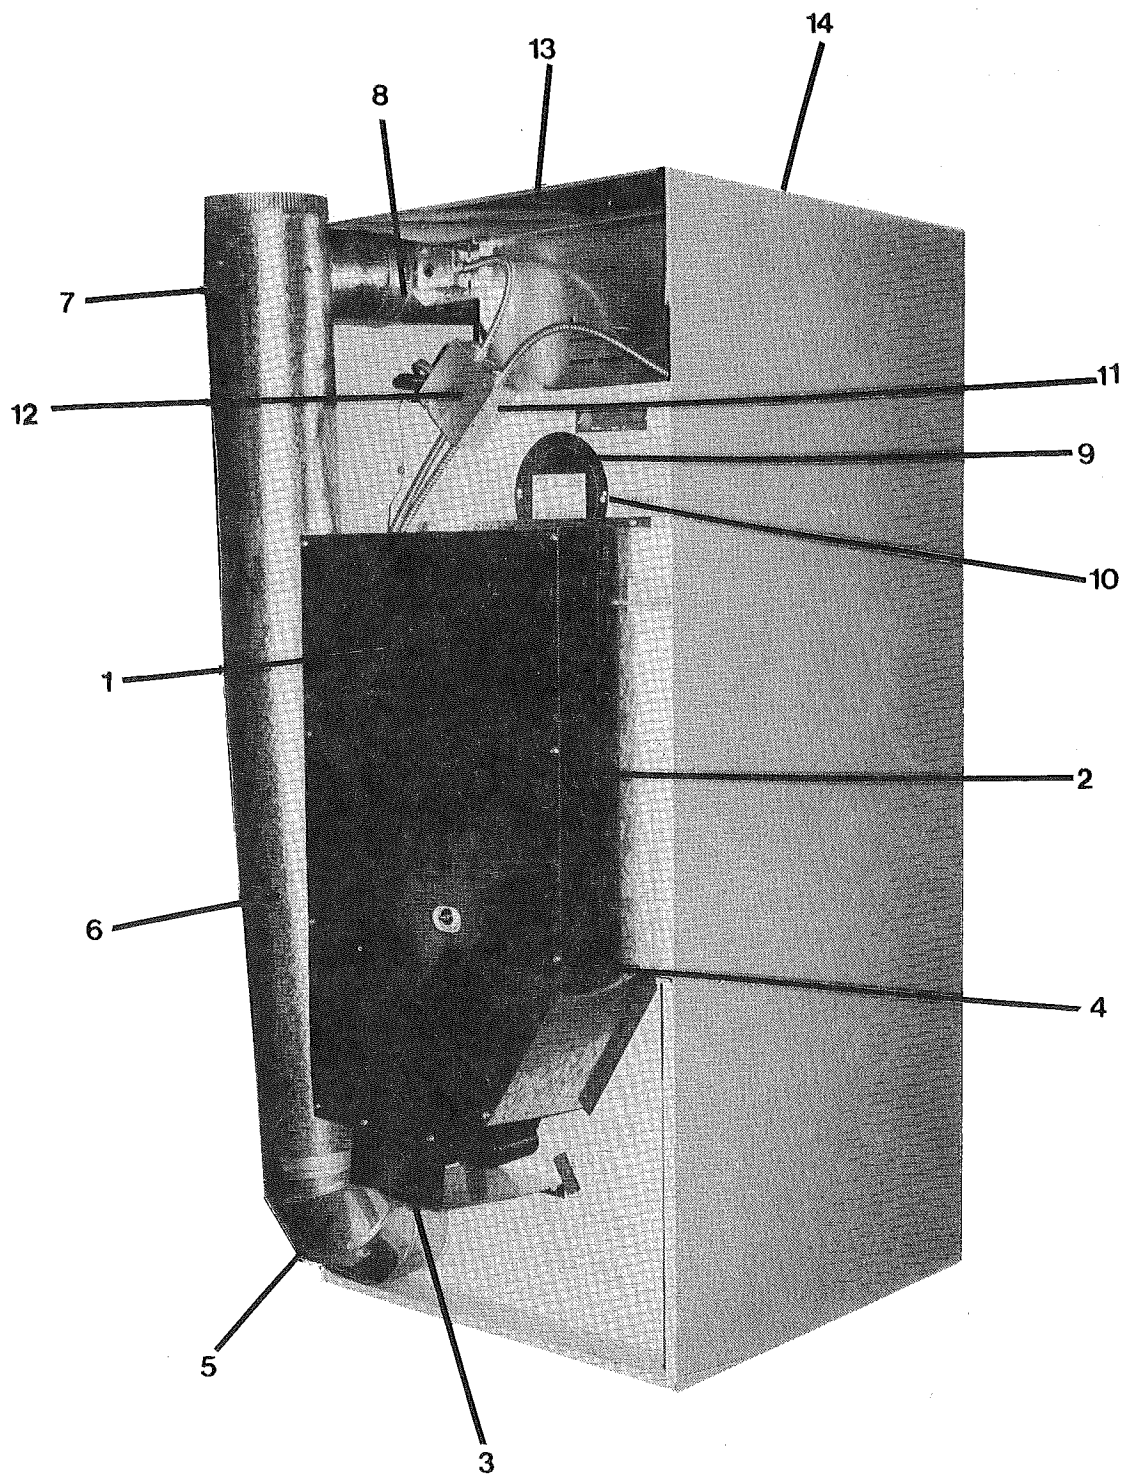

REAR PANEL GROUP


All Models

Key	Part Number	Description	
1	9208-039-001	Guard, Drive	1
*	9454-595-002	Panel, Side Guard (L.H.)	1
2	9454-596-002	Panel, Side Guard (R.H.)	1
3	9550-141-001	Shield, Motor	1
4	9545-008-006	Screw, Guard Panel	21
5	9142-039-001	Elbow, Exhaust (8")	1
6	9109-101-001	Pipe (8")	1
7	9810-018-001	Tee Assy., Recirculating	1
*	9125-002-001	Damper, Backdraft (included in assy.)	1
*	9451-146-002	Pin, Damper (included in assy.)	1
*	8520-141-000	Nut, Spring (included in assy.)	2
*	9545-008-006	Screw, Tee Assy.	4
8	9918-002-002	Boot Assy., Recirculation	1
*	9545-008-006	Screw, Recirculation Assy.	8
9	9452-253-000	Inspection Plate	1
10	9545-008-006	Screw, Inspection Plate	2
11	8658-012-000	Box, Electrical Junction	1
12	8693-005-000	Cover, Junction Box	1
*	9545-008-006	Screw, Junction Box Mtg	2
*	8640-276-003	Nut, Wire	AR
13	9074-236-001	Cover, Cabinet Top	1
14	9545-008-006	Screw, Cabinet Cover	8

COIN BOX GROUP

Computer & Rotary Meter Only

Key	Part Number	Description	
*	9732-122-001	Kit, Coin Box & Hardware (includes the following)	1
1	9807-077-007	Box Assy., Coin	1
2	9349-033-001	Latch, Coin Box	1
3	8641-581-008	Washer, Latch Spacer (thick)	2
3	8641-581-010	Washer, Latch Spacer (thin)	4
3	8641-569-002	Washer, Wave	1
3	8641-583-001	Washer, Special Keeper	1
4	8650-012-002	Lock, Coin Box (includes key & nut)	1

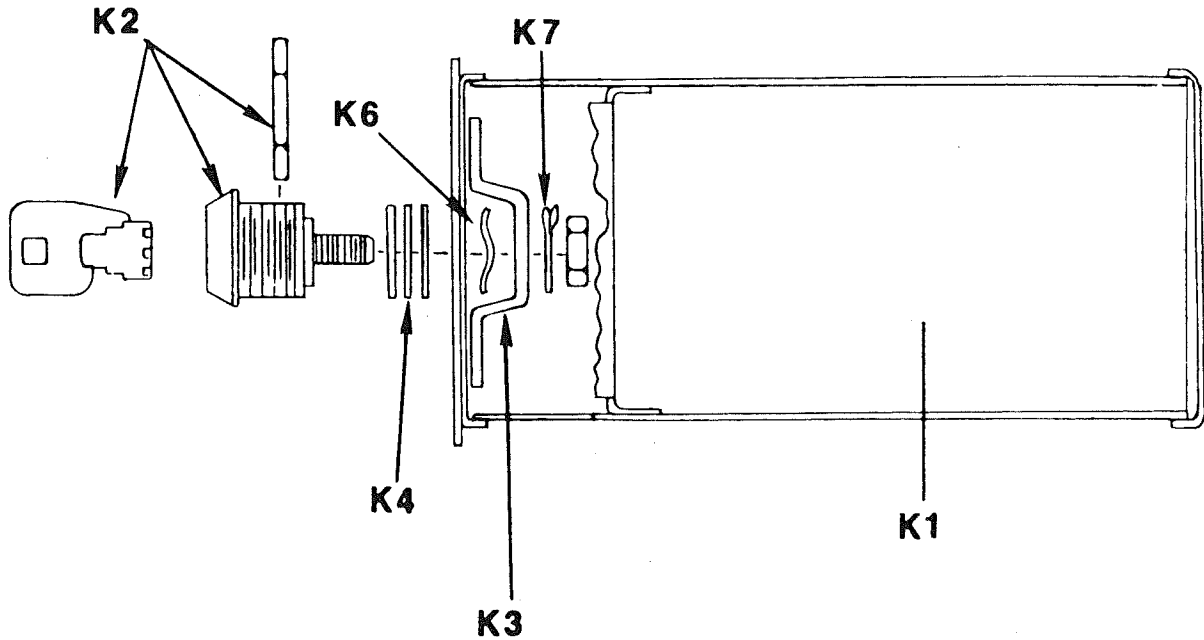

WIRING GROUP Computer Only

Key	Part Number	Description	
	9627-651-001	Harness, Electronic Control	1
	9627-679-001	Harness, Temperature Sensor	1
	8220-001-224	Wire, Hi-Limit to Junction Box (orange/bk. 41 1/2")	1
	8220-001-352	Wire, Junction Box to Terminal Block (orange/bk. 46")	1
	8653-039-000	Wire Connector, In Line Plastic Insulated	1

WIRING GROUP Rotary Meter & Manual Timer Only

Key	Part Number	Description	
	8220-001-202	Wire, Hi-Limit to Junction Box (red 41 1/2")	1
	9631-381-004	Wire, Terminal Block to Meter (gray 16 1/2")	1
	9631-381-003	Wire, Cycling T-Stat to Meter (red/wh. 20 1/2")	1
	9631-381-001	Wire, Meter Motor to Meter Switch (black twin)	1
	9631-381-002	Wire, Terminal Block to Start Switch (blue)	1
	9631-381-011	Wire, Terminal Block to On Light (black 18")	1